

How to Measure your Shipping Container's ribs



Use a straight edge to measure the height of your container's roof ribs. They should be approximately $\frac{3}{4}$ of an inch.



Next measure the very top flat part of your container's roof ribs. This will be either approximately 3.5 inches

OR



6.5 inches as shown in these photos. If your container's rib fit within these measurements, our Conex products will fit.

Our Conex SolarBlaster product's flashing can be molded to fit some variance to the above measurements.